

Quick Start

- Press • Display: **425F** • Temperature: 425°F • Default 1 hour.

Easy Pause

- Press once • Display: **425F** • Display will clear after 45 minutes.

Easy Stop

- Press twice • Display: **0**

Temperature can be changed from F° to C°. In case of accidental change press program → ⊖ → then ⊖ button again to choose preferred temperature → press to continue.

Easy Temperature Setting

- Press • Display: **SEAR** → • Press • Default 1 hour.
- Press • Display: **175F**

Changing Cooking Temperature

ex) 250° F desired cooking temperature

- Press • Display: **275F** → • Press ⊖ 3 times → • Press • Default 1 hour.

Changing Cooking Time

ex) 3 hours and 45 minutes

- Press • Display: **00:00** → • Press ⊕ 5 times • Display: **00:05** →
- Press • Display: **00:05** → • Press ⊕ 4 times • Display: **00:45** →
- Press • Display: **00:45** → • Press ⊕ 3 times • Display: **03:45** • Default 425°F.

Stage Cooking

ex) start cooking at High (425° F) for 5 minutes then Medium/Low (175° F) for 3 minutes

- Press → • Press • Display: **425F** → • Press • Display: **00:00**
- • Press ⊕ 5 times • Display: **00:05** → • Press • Display: **175F**
- • Press • Display: **00:00** → • Press ⊕ 3 times • Display: **00:03** → • Press

Delay

ex) Delay Cooking for 6 minutes then cook on High (425°F / 218°C) for 3 minutes

- Press → • Press • Display: **00:00** → • Press ⊕ 6 times • Display: **00:06** → • Press
- • Press • Display: **425F** → • Press → • Press ⊕ 3 times • Display: **00:03** → • Press